

Product Specication

Type : GL-B225G-EC-M0

Blauberg	Compilation	Check	Approved
	Alan		Ryan
Customer	Proofread	Check	Approved

[illegible]

Norminal Data

Type	GL-B225G-EC-M0
Motor	EC072AC230V085W
Phase	1 ~
Nominal Voltage	230VAC
Nominal Voltage Range	184 ~ 276VAC
Frequency	50/60 Hz
Method of Obtaining Data	FA
Nominal Speed	2300±5%RPM
Max. Input Power	85W
Max. Input Current	0.7A
Sound level	74dB(A)
Min. Ambient Temperature	-25°C
Max. Ambient Temperature	60°C


ML=Max. load ME=Max. efficiency FA=Free Air

01 Overall efficiency η_{es} %	Actual 30	06 Power consumption P_{ed}	0.083KW
02 Measurement category	A	07 Air flow q_v	488m ³ /h
03 Efficiency category	Static	08 Pressure increase p_{fs}	217Pa
04 Efficiency grade N		09 Speed n	2075RPM
05 Variable speed drive	Yes	10 Specific ratio*	1.00

*Specific ratio=1+ p_{fs} /100000

Technical description	
Weight	3.1Kg
Packaging	54PCS/Pallet
Fan size (L×W×H)	270×270×132
Motor Size	72
Impeller Material	PP+GF
Number of Blades	7
Direction of Air Flow	All Around
Direction of Rotation	Clockwise, Viewed Toward Rotor
Rotor Surface	Plastic Spraying (Blue)
Rotor Housing	Stretch
Degree of Protection	IP55
InsulationClass	Class B
Min. Permitted Ambient Temp. for Motor (Transport/Storage)	-40°C
Max. Permitted Ambient Temp. for Motor (Transport/Storage)	+80°C
Min./Max. Humidity	5% ~ 90%RH
Min./Max. Storage	5% ~ 95%RH
Installation Position	Any
Cooling Holes/Cut-outs	Rotor Side
Mode	S1
Motor Storage	Ball Bearing
Technical Features	◆Output 10 VDC, Max. 10 mA ◆Control Input 0-10 VDC / PWM,PWM Max. Input Voltage 10VDC ◆Locked Rotor Protection ◆Termal Protection ◆Excessive Voltage Protection ◆Less Voltage Protection ◆Overcurrent Protection ◆Soft Start
Strength Class of Screws	8.8
Length of Cable	Standard 500±20mm(Can be Stacked Every 500mm)
Dielectric Strength	1800VAC/50Hz, 1s, Leakage Current ≤10mA,No Breakdown Flashover
Touch Current According to IEC 60990	≤3.5mA
Conformity with Standards	CCC、CE、RoHS

Air Performance

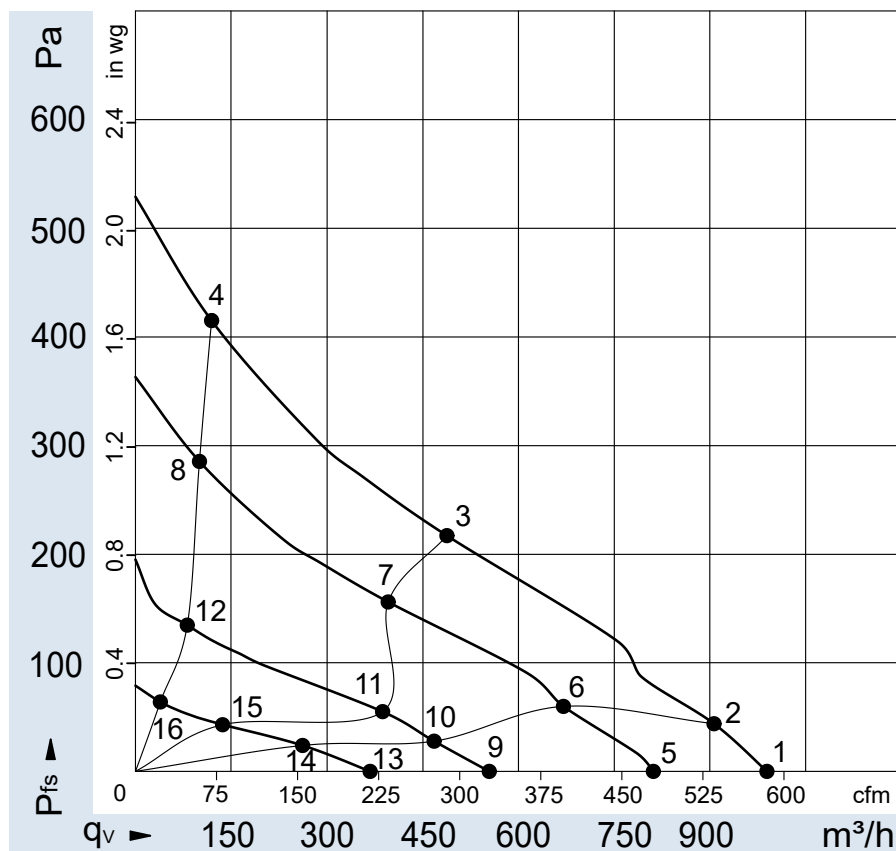

Air performance measured according to AMCA210/GB1236 installation category A. For detailed information on the measurement setup, contact Blauberg. The values given are valid under the specified measuring conditions and may vary due to conditions of installation. For deviations from the standard configuration, the parameters have to be checked on the installed unit.



Testing Data

	U	f	N	P _{ed}	I	q _v	q _v	P _{fs}	P _{fs}
	V	Hz	rpm	W	A	m³/h	cfm	Pa	in wg
1	230	50	2263	84	0.52	986	582	0	0
2	230	50	2179	84	0.52	907	534	44	0.177
3	230	50	2479	84	0.52	119	70	415	1.667
4	230	50	2075	84	0.52	488	278	217	0.871
5	230	50	1888	47	0.27	811	477	0	0
6	230	50	1746	47	0.27	671	395	60	0.241
7	230	50	2050	47	0.27	100	59	285	1.145
8	230	50	1725	47	0.27	396	233	156	0.627
9	230	50	1379	19	0.14	554	326	0	0
10	230	50	1304	19	0.14	468	275	28	0.112
11	230	50	1408	19	0.14	81	47	135	0.542
12	230	50	1279	19	0.14	387	228	55	0.221
13	230	50	875	7	0.04	368	216	0	0
14	230	50	829	7	0.04	262	154	24	0.096
15	230	50	954	7	0.04	39	22	64	0.257
16	230	50	838	7	0.04	136	80	43	0.173

U=Power Supply f=Frequency n=Speed P_{ed}=Power Consumption I=Current Draw q_v=Air Flow
P_{fs}=Pressure Increase


Efficiency Grade $\eta_{F,sys}$

Power Input P_{sys}

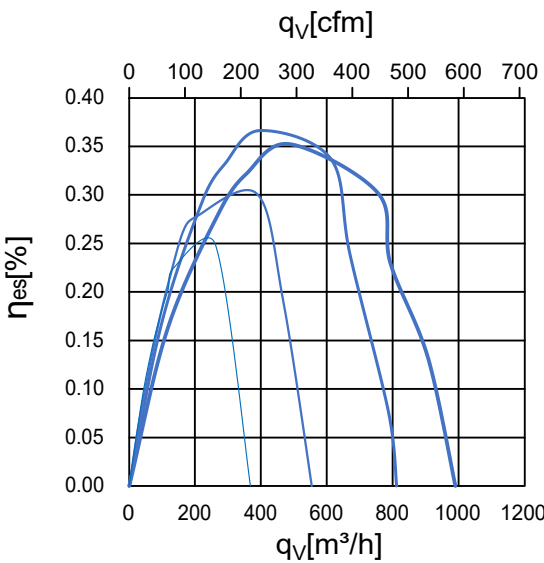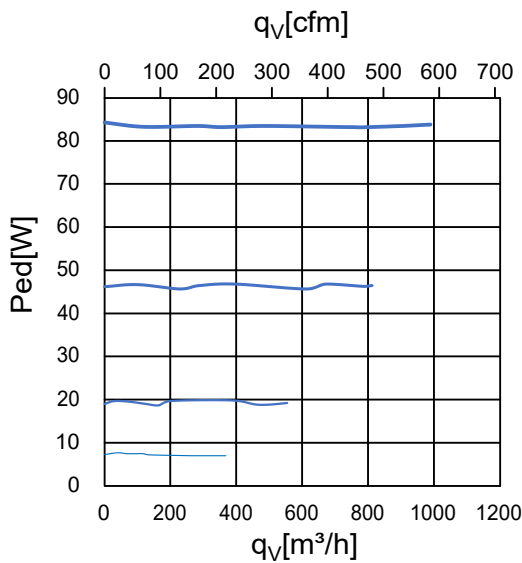

Acoustics ($L_p(A)$)


ACOUSTICS($L_p(A)$)

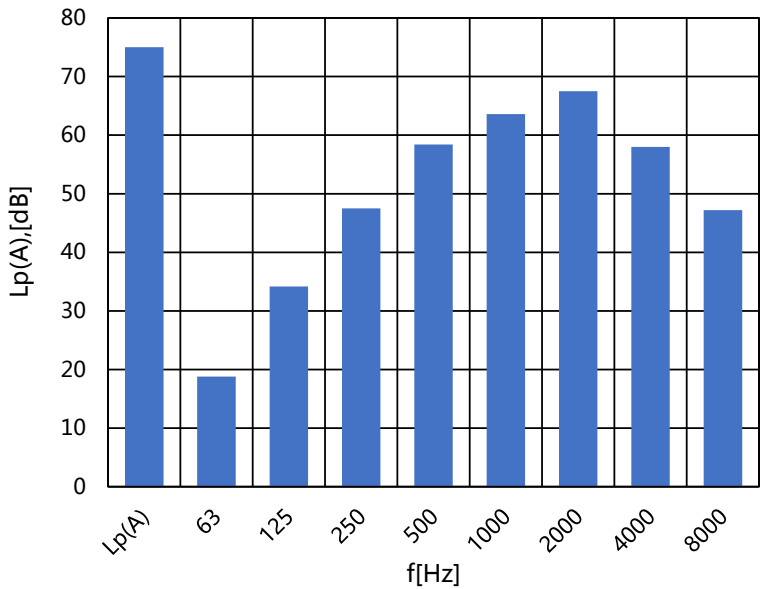

1 GL-B225G-EC-M0

f [Hz]	sum	63	125	250	500	1000	2000	4000	8000
$L_p(A)$	74	18.8	34.2	47.5	58.4	63.6	67.5	58	47.2


Outline Drawing

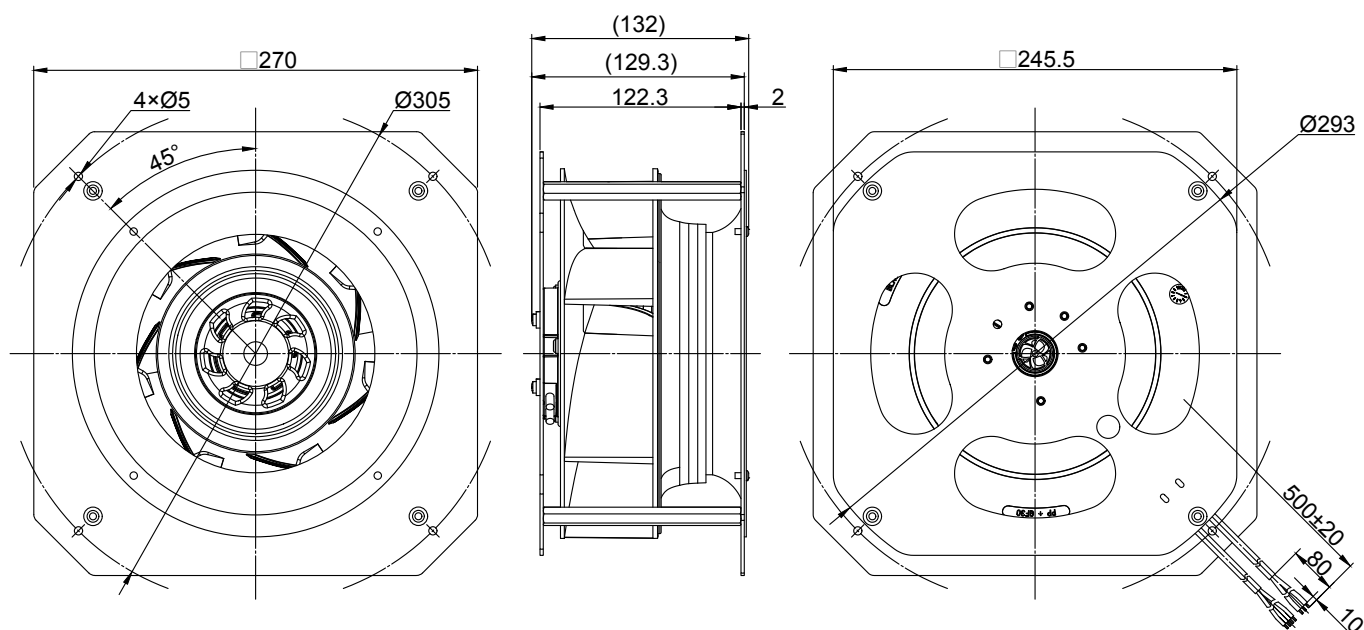

1	AC Cable PVC 3×AWG20
2	DC Cable PVC 4×AWG24

Speed Setting


1.Full Speed

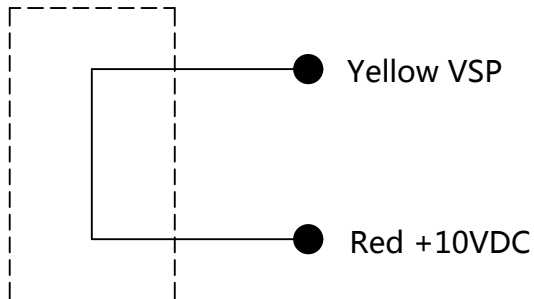

Short Red&Yellow

Fan will run full speed

2.Voltage Control 0-10VDC($\pm 0.2V$)

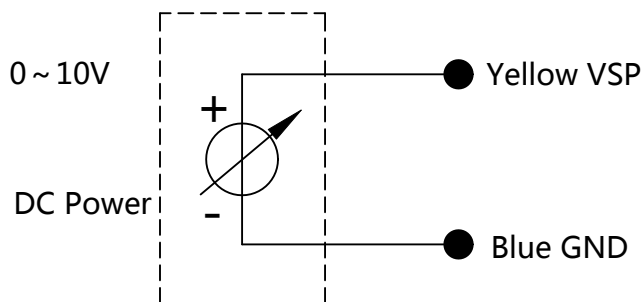


User DC power support 0 ~ 10VDC voltage

Voltage higher than 1.0V DC,fan start up

Voltage lower than 0.5V DC,fan stop

$\geq 1.0VDC$ Fan start up

3.PWM Control,PWM duty 0%-100%($\pm 2\%$)

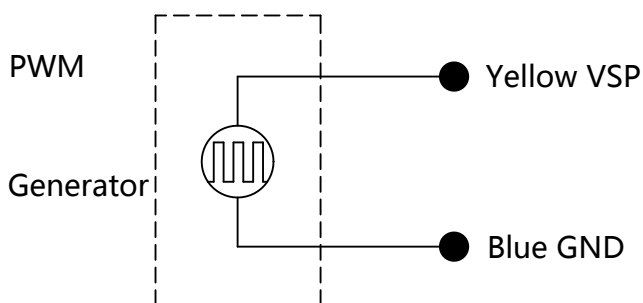

PWM duty control

PWM suggest amplitude:10VDC($\pm 5\%$)


PWM Frequency:1KHz ~ 10KHz

PWM duty higher then 10%,fan start up

PWM duty lower then 5%,fan stop

$\geq 10\%$ PWM duty,fan start up

4.Potentiometer Control

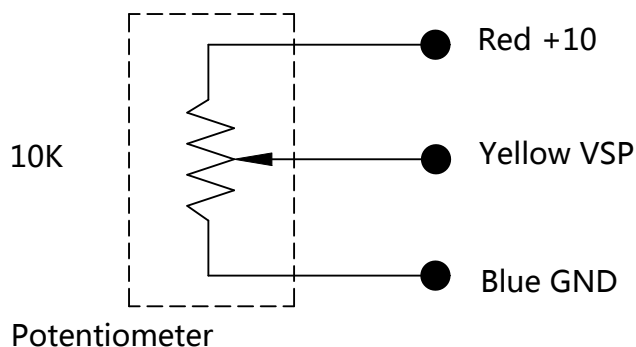


Suggest to use 10K potentiometer

Voltage higher than 1.0V DC,fan start up


Voltage lower than 0.5V DC,fan stop

$\geq 1.0VDC$ Fan start up

Wiring Label

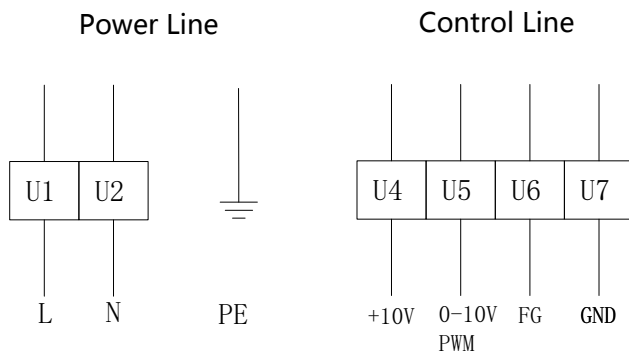


Wiring diagram for signal feedback

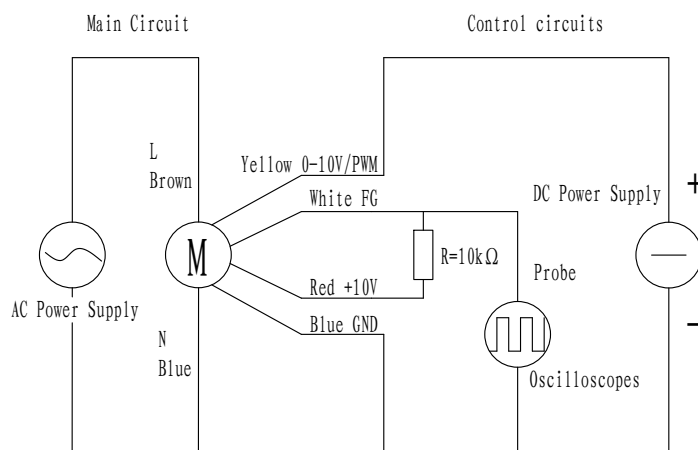

The fan provides a speed output signal, output signal drawing see under annex.
V_{fg} and pull up resistor are connected by customer.

$$V_{fg} = (3.3 - 30) \text{ VDC}, R \geq 1000 \times (v_{fg}) \Omega$$

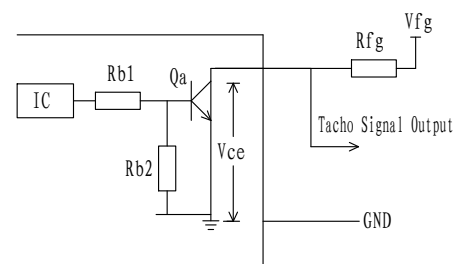

Speed Calculation

$$n = 60f/a ;$$

n = Fan speed

a = Pulse (Several Pulse/Revolutions)

f = Signal Output waveform frequency

Note

1	The power line and control line of the fan should be connected in strict accordance with the wiring diagram to prevent the fan from burning out;
2	Do not connect the white signal wire directly to the red signal wire or the external DC power supply;
3	If the fan does not work after starting, please check the input voltage of the speed regulation, which may be improperly connected. To prevent hand or other personal injury caused by sudden start of the fan; Do not touch the impeller or rotor after electrifying;
4	It takes a few seconds for the fan to start after power on. In order to prevent personal injury, do not touch the impeller or rotor under the condition of electrifying or low speed operating;
5	Before turning on the power, please check whether the motor is installed reliably, otherwise it will cause the motor to burn and personal accidents;
6	It is forbidden to pull the power cord too hard, If the power cord is damaged, the power cord must be replaced by the manufacturer to avoid electric shock accidents;
7	It is forbidden to drop or crash the motor;
8	It is strictly forbidden to flush the motor to prevent leakage accidents caused by reducing the insulation performance of the motor and endangering personal safety;
9	If you need to use special customized products for purposes other than the agreed working conditions, please consult our company first and confirm to use;
10	After the fan operation stops, the temperature of the motor casing may be high in a short period of time, please avoid direct release. Protect if necessary Measures to prevent burns;
11	When installing the equipment, pay attention to check the casing and other shells, no debris can fall in, and clean up the inside if necessary;
12	Before the equipment is installed and running, the rotor should be pulled by hand to confirm that there is no collision, interference or jamming before it can be powered on;
13	As a part of the fan, the motor cannot be used alone without impeller or load;
14	After the product packaging has been disassembled, it should be repackaged if it needs to be kept in storage. The product shall be stored in a clean, well-ventilated warehouse with ambient temperature of -40°C~+80°C, relative humidity of no more than 95%, no corrosive gases in the air, and 15cm above the ground. ;
15	Please install the fan out of the reach of children and do not allow children to use this product;
16	The final interpretation right of this specification belongs to Blauberg.

Life and maintenance, warranty

1	The design life of the fan is 50,000h, which is limited by the life of the ball bearing at 40°C of 50,000h. The actual service life of the fan will vary depending on the temperature, humidity, installation method, fan load and other conditions of the use environment;
2	According to the environment, it is recommended to clean and maintain the fan every 3~6 months;
3	From the date of purchase (subject to the delivery date of the order), the warranty period of the whole machine is one year, during this period, the company provides free replacement or repair for the failure and damage caused by the quality problem of the product itself. If the damage is caused by undue disassembly, handling, man-made damage or natural disasters and other force majeure, it is not covered by the Blauberg's warranty.